

Prepared By
Client/Company
Order/Quote Date
Customer Ref No.

Please circle your selection.

Barwon Hudson ☐

CONFIGURATION

Mechanism

Size

Wheels

Memory Foam

Cushion Options

ROHO Insert

Controller Option

Back Angle

Other Options

Single Motor (standard)	Dual Motor	180kgDual Motor	Vertical Lift	Electric Recline	Manual Recline	Rocker Manual Recline
Mini		A		B		C
50mm Costars (standard)	75mm Mobile Castors	B24 Mobile Kit	Glides		Remove Castors	Remove Castors on Site
Seat		Legrest		Backrest		Armrest
Gluteal Recess		Concave Back			Blow-fill Lumbar	
None (Standard)		Cushion Cut-out. Specify Size:			Include infill cushion	
Right (Standard)		Left		Double Pocket		Joystick
Standard		Vertical			Over-Vertical	
Rechargeable Battery Pack		Scotch Guard			Tablet Arm Left/Right	
Flush Front		Leg rest Side Walls			Controller Loop Left/Right	
Waterfall Arms		Loose armrest/headrest covers			Fixed armrest/headrest covers	
Removable Headrest A B C D E (please circle one)						

DIMENSIONS

mm	Seat Depth			Seat Height		Back Height			Footrest Length	Scap Height	Seat Width		Arm Height	Seat Foam	
Decrease Size	-100		-150	-35		-120	-150	-180	-50		-150		-60	-20	
	-25	-50	-75	-25	-30	-30	-60	-90	-25		-50	-100	-30		
Mini Std Size		455		456		636			N/A	429	540		199	N/A	
Increase Size	-25		-50	+20		-30	+60	+90	+25		+50		+30	+20	
	490					+120		+150	+50				+60		
Decrease Size	-100		-150	-35		-120	-150	-180	-50		-150		-60	-20	
	-25	-50	-75	-25	-30	-30	-60	-90	-25		-50	-100	-30		
A Std Size	490			476		647			N/A	440	540		180	N/A	
Increase Size	+25		+50	+20		+30	+60	+90	+25		+50		+30	+20	
	+75					+120		+150	+50				+60		
Decrease Size	-100		-150	-35		-120	-150	-180	-50		-150		-60	-20	
	-25	-50	-75	-25	-30	-30	-60	-90	-25		-50	-100	-30		
B Std Size	520			496		647			N/A	481	540		190	N/A	
Increase Size	+25			+25		+30	+60	+90	+25		+50		+30	+20	
	+50					+120		+150	+50				+60		
Decrease Size	-100		-150	-35		-120	-150	-180	-75	-100		-150		-60	-20
	-25	-50	-75	-25	-30	-30	-60	-90	-25	-50		-50	-100	-30	
C Std Size	545			546		718			N/A		511	540		190	N/A
Increase Size	+25			+25		+30	+60	+25			+50		+30	+20	
				+50		+90	+120	+50					+60		

COLOR & FINISH

Fabric


Wood

Inner					
Outer					
	Mahogany	Walnut	Teak	Baltic	Remove SHow-wood

ADDITIONAL NOTES

Chair Sizing

OUR RECOMMENDED STARTING POINT

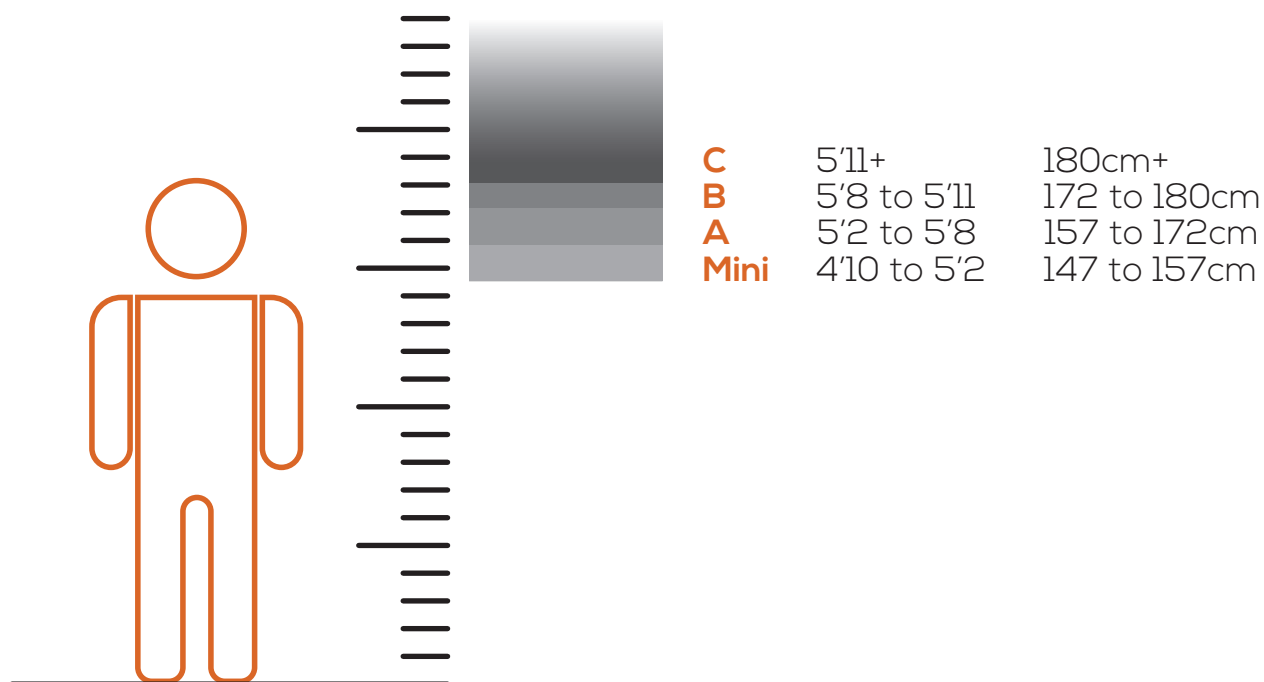


ENSURING CORRECT MODIFICATIONS



Seat Depth

- Heels up against the footrest
- Light pressure on the calf
- Feet planted on the ground, avoid legs angled too far forward
- Mention gluteal recess if user unable to sit back into the chair

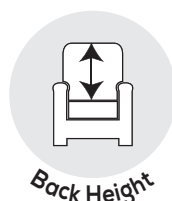

Back Height

- Nape of the neck sitting in centre of top cushion
- Shoulder blades sitting in gap of the top roll
- Adjustments can be made manually by repositioning backrest



Seat Height

- Knees in line with hips
- Feet planted on the ground
- Even pressure from their backside to the back of their legs
- Use blocks to determine adjustment if feet don't reach the ground



Arm Height

- Elbow to wrist should be supported
- If shoulders are hunched up, arms too high
- Gap between armrest and elbow, arms too low



Seat Width

- Fit a fist beside each thigh comfortably
- Waterfall arms can also decrease seat width



Footrest Length

- Heel clear of footrest to avoid pressure sores
- Ankles to be supported